

# Classic Mailbox Posts

## 4896 In-Ground Mounting Kit Installation Instructions

### Installing the In-Ground Mount into the Ground


Thank you for selecting Salsbury's 4896 in-ground mounting kit for attaching to a 4890, 4891, or 4892 classic mailbox post. We are confident that the quality and construction of the kit will prove to be a good investment.

When you install a curbside mailbox, make sure that it is easily accessible to the mail carrier. By regulation it should be 41" to 45" from the ground or street surface up to the inside floor of the mailbox. The door should be set back 6" to 8" back from the front face of the curb or the road edge. However, you should check with your local postmaster to ensure that the mailbox is installed according to local regulations.

Dig the hole for the in-ground mount. Be careful not to puncture water, sewer, or gas lines when digging the hole for the in-ground mount.

Attach the post to the in-ground mount with the four (4) 3/8"-16 hex washer head bolts and plastic bolt-head covers provided in the in-ground mount kit.

Set the in-ground mount in the hole with the top plate slightly above the surrounding earth so that water drains away from the base of the mailbox post. Pack the earth firmly under and against the in-ground mount. Use a carpenter's level on the sides of the post to ensure that the post is aligned vertically as the earth is compacted.

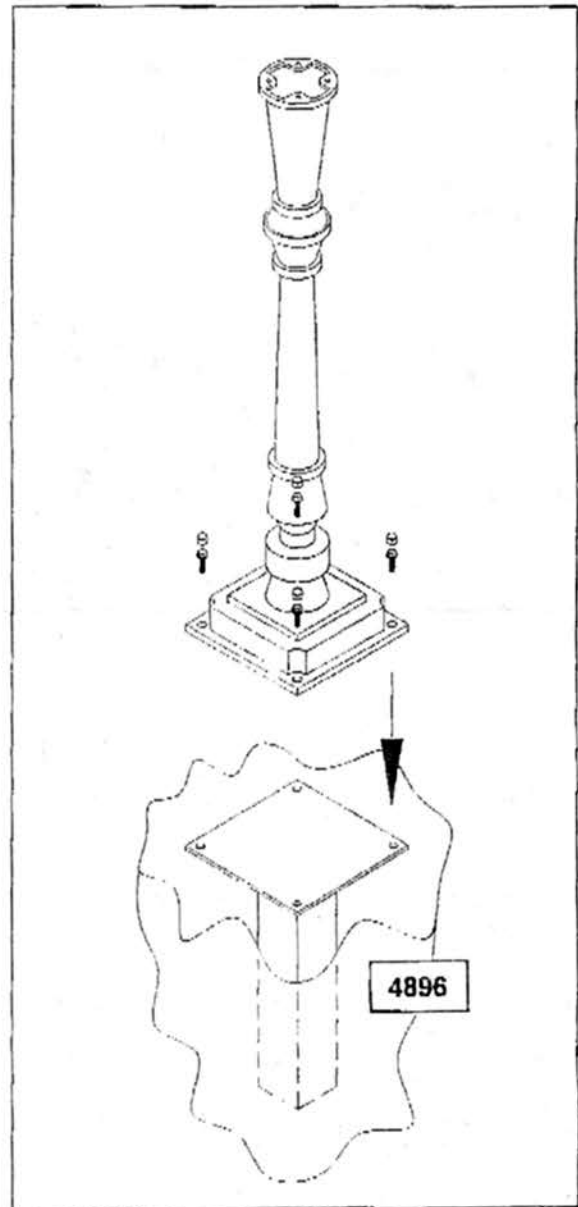

### SALSBURY INDUSTRIES

1070 East 62<sup>nd</sup> Street, Los Angeles, CA 90001-1598  
Phone: 1-800-624-5269 Int'l Phone: 323-846-6700  
Fax: 1-800-624-5299 Int'l Fax: 323-846-6800  
www.mailboxes.com engineering@mailboxes.com

Installation instructions are provided as general guidelines. It is advised that a professional installer be consulted. Salsbury Industries assumes no product assembly or installation liability.  
Copyright © 2006 Salsbury Industries. All rights reserved.